
HUCK BOLTS USED IN CROSSINGS AND JOINTS

FB BURNS (INSULATED) BLOCK JOINT

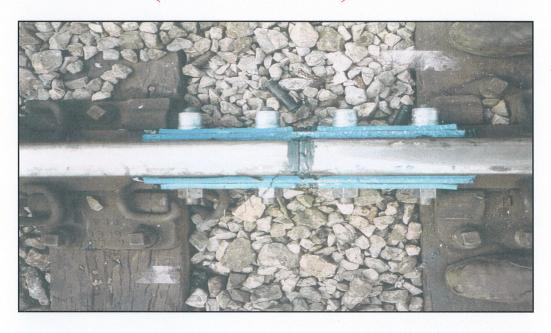

RAIL TYPE	MRS PART NUMBER	
RAILTRACK FLAT BOTTOM		STUD
	57-150998	NUT
		SPACER
	57-150900	COLLAR
RAILTRACK BULL HEAD		STUD
	57-150998	NUT
		SPACER
	57-150900	COLLAR
	*SEE NOTE	

NOTE: Spacer is intended to give clearance between nose of installation tool and rib of fishplate or lip of keep plate. May not be needed in all situations.



